



# PERIMESH® INSTALLATION QUICK GUIDE

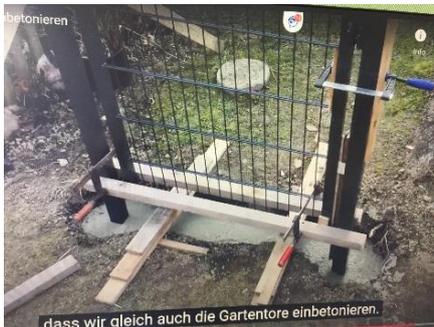

Set and assemble posts with struts professionally (concrete C20/25 or screw installation with suitable screws). It is important to install all posts on the correct side (outside/inside). With concrete type make sure that posts are set deep enough (check hole position for the tensioning rope). Distance between the posts should be a maximum of 2,5m with a maximum length of 20 to 25m.




Guide the tensioning ropes through the middle posts at the top and the bottom. At one side insert the ropes into the rope tensioner

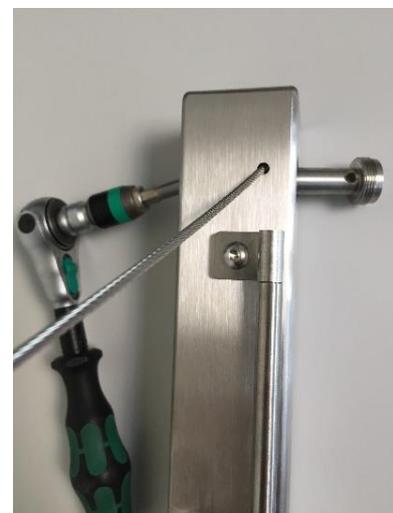

Turn the rope tensioner with a ratchet wrench and fix the rope tensioner with M3 screw at one of the four thread positions. Then cut the rope ends on the other fence side to the appropriate length (approx. 15cm longer than the end of the post). After that insert the rope into the tensioner and bring it to the desired or required final tension. Fix it again with M3 screw.



Install vertical rope clamps at one net side (vertical clamps are not absolutely necessary). Use cable ties to install the net at end post round rod. Connect at least every second clamp to the rod with cable ties – first with large distance to the round rod. Now you can use net clips to connect ropes with the net mesh horizontally. After that you should pull the net to the other side. Then you can see where you can cut the net to the perfect length. It is good to connect net and post with three (top, bottom, middle) cable ties before you cut the net. Cut the net direct at the net clamp. Install vertical rope clamps again and make the connection net with posts like the other side. Now you can adjust the desired und final tension with the cable ties.

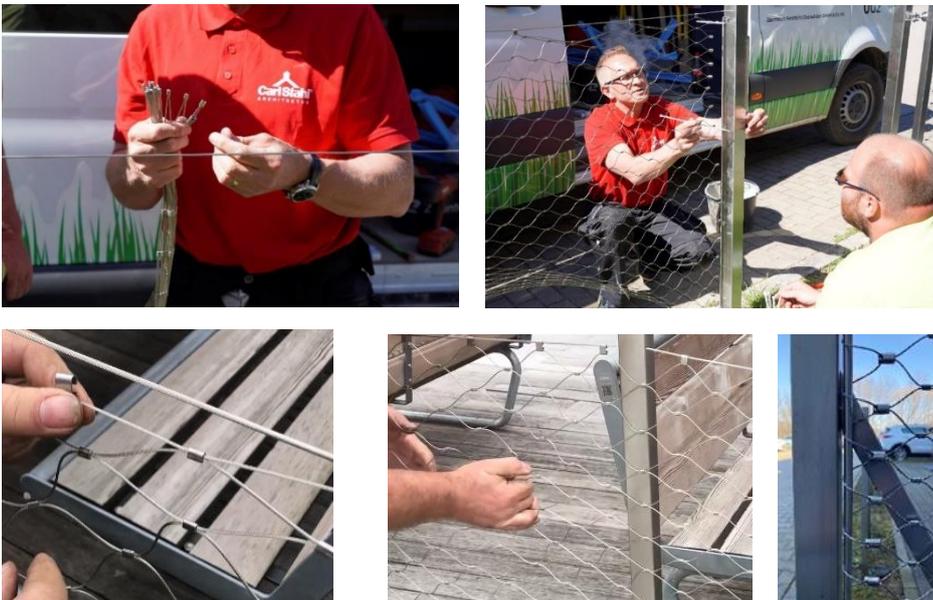

With installation rope 1,5mm (length at least 2 times post length) a very small loop is formed and pressed around the top tensioning rope. Use a standard clamping pliers. Now the end of loop fixed installation rope is threaded around the rod and through the vertical clamps from top to bottom. At the bottom make again a loop, tighten and press it. Make sure that a good tension is achieved at the end (correspondingly cable tie distance between clamps and round rod). Now you can cut off cable ties. Finally press net clip with special pressing pliers.

